

Insert a Memory Card


The camera stores pictures on Secure Digital (SD) memory cards (available separately).

1 Turn the camera off.

Inserting and Removing Memory Cards


Always turn the camera off before inserting or removing memory cards.

Power switch

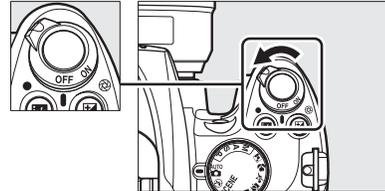

2 Open the card slot cover.

Slide the card slot cover out (1) and open the card slot (2).

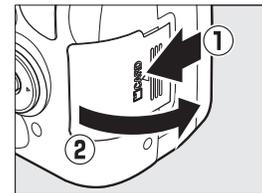


3 Insert the memory card.

Holding the memory card as shown at right, slide it in until it clicks into place. The memory card access lamp will light for a few seconds. Close the memory card slot cover.

Inserting Memory Cards

Inserting memory cards upside down or backwards could damage the camera or the card. Check to be sure the card is in the correct orientation.

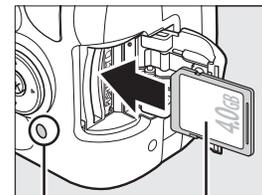

Access lamp
Front

If this is the first time the memory card will be used in the camera after being used or formatted in another device, format the card as described on page 23.

■ ■ Removing Memory Cards

After confirming that the access lamp is off, turn the camera off, open the memory card slot cover, and press the card in to eject it (1). The card can then be removed by hand (2).

